

MSD INSTALLATION INSTRUCTIONS

MSD 12 Amp Pro Mag Electronic Points Box PN 8105, PN 8106

ONLINE PRODUCT REGISTRATION: Register your MSD product online and you'll be entered in our monthly 8.5mm Super Conductor Spark Plug Wire give-away! Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to www.msperformance.com/registration.

Parts Included:

- 1 - Points Box
- 4 - Vibration Mounts (PN 8823)
- 1 - Wire Harness
- 3 - RPM Modules - 7,000, 8,000 and 9,000

Note: On engines equipped with block mounted starters, a 16 volt battery is recommended.

MOUNTING

The Electronic Points Box can be mounted in any position, except upside down. It should be kept clear of direct engine heat sources such as the exhaust. Before mounting the box make sure the wiring harness and coil wire reach the generator.

The Box is supplied with four 3/4" vibration mounts. These mounts are designed for lower levels of vibration over a long interval of time such as experienced in circle track racing. Use a 3/16" drill bit with these mounts (Figure 1). These vibration mounts are available separately as PN 8823.

If your application experiences severe vibrations for a short duration, such as tire shake from drag racing, PN 8822 Vibration Mounts are recommended. These are 1" mounts and are designed for extreme conditions. (These are supplied with Pro Mag Generators PN 8150 and PN 8160 and require a 1/4" bit for installation.)

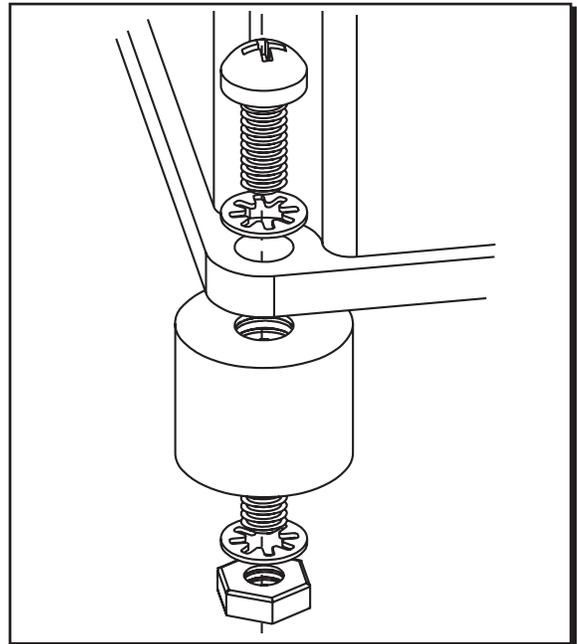


Figure 1 Mounting the Points Box.

WIRING

When routing the wiring harness make sure the wires are not pulled tight to the point of being stressed. Also, take care to route them away from direct engine heat sources and sharp edges. If the connectors do not mate together, check for bent or mislodged terminal pins. Do not force the connectors together!

To ensure a good ground path from the Electronic Points Box, a ground wire should be routed from the Points Box to the cylinder head of the engine. Use a #10 ring lug connector with 16 gauge wire (Figure 2). The wires should be connected between the Box and the retaining screw.

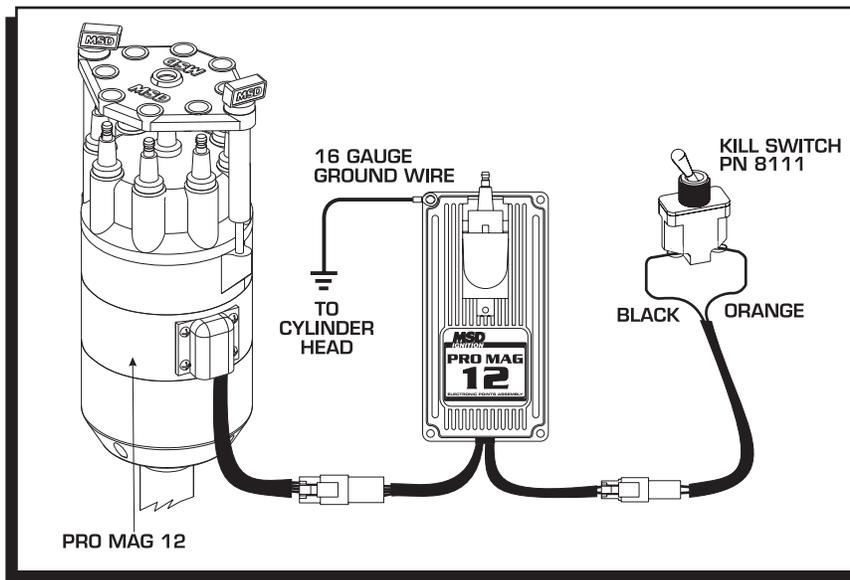


Figure 2 Wiring the 12 Amp Pro Mag.

ACCESSORIES

WIRING A CONVENTIONAL TACHOMETER

MSD offers a Magneto Tach Converter, PN 8132, that converts the Pro Mag's trigger signal so most automotive tachs can be used (Figure 3). A 12 volt source is required.

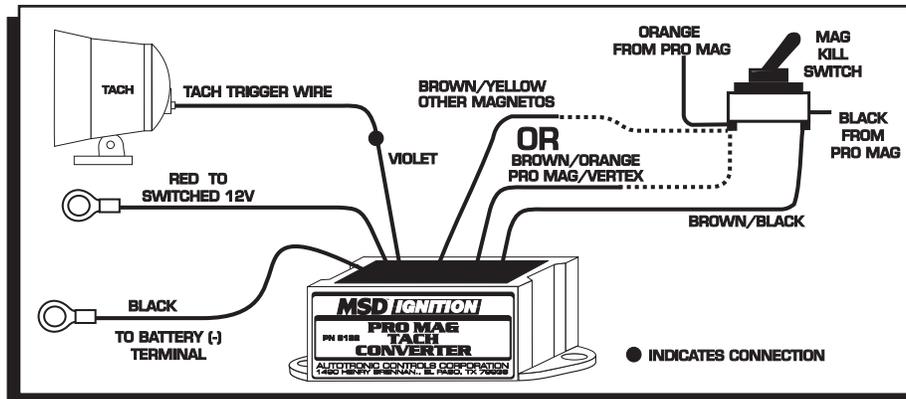


Figure 3 Wiring a Tachometer with PN 8132.

Inductive Triggered: Inductive magneto tachs will require the MSD Adapter, PN 8114. This provides a wire loop for the inductive pickup of the tachometer (Figure 4).

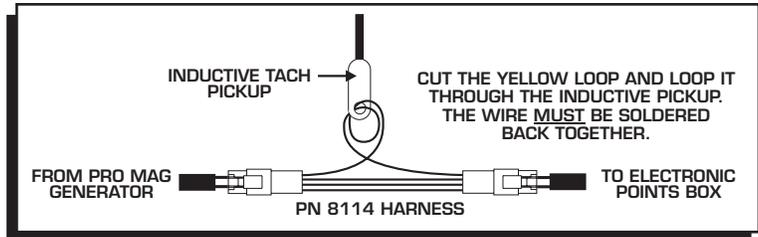


Figure 4 Wiring an Inductive Triggered Tach.

Battery Operated Tachometers: Follow Figure 5 to wire a battery operated sprint car tach.

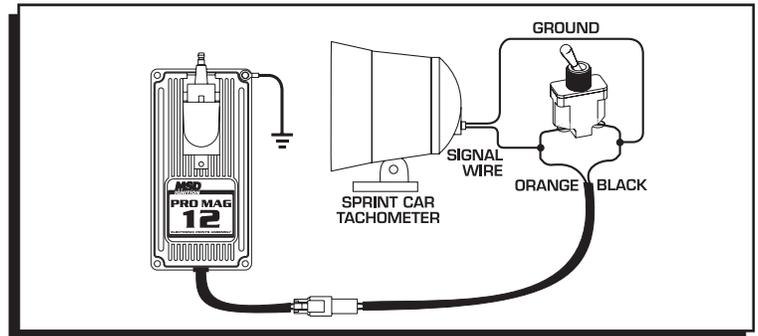


Figure 5 Wiring a Two Step.

TWO STEP MODULE SELECTOR

The Soft Touch Rev Control built into the Electronic Points Box can be used with a Two Step Module Selector, PN 8739, to give you two different rev limits. MSD also offers a Three Step Module Selector, PN 8737, for three rev limits. Note: A 12 volt source is required.

By connecting the Two Step to a trans brake or switch, you can have a low rpm limit to use on the starting line for consistent holeshots. When the switch is released the rev limit switches to the high limit for overrev protection. Figure 6 shows a Two Step installation.

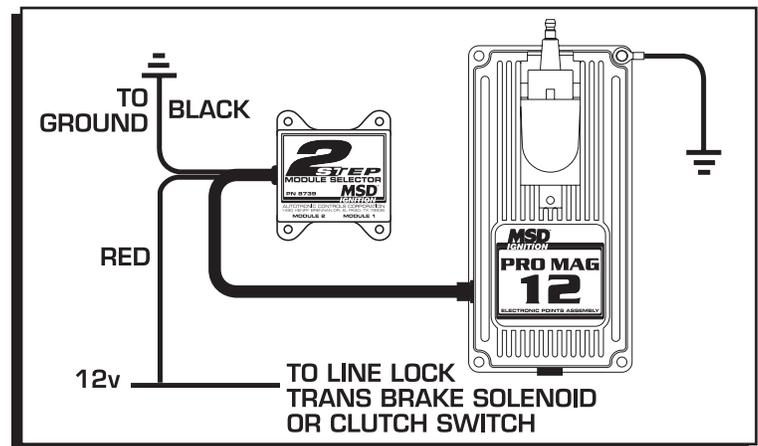


Figure 6 Wiring a Two Step.

RPM ACTIVATED SWITCH

MSD offers a Magneto RPM Activated Switch, PN 8957, that will complete or open the ground circuit of an accessory such as a solenoid or light. This can be used in a variety of applications (Figure 7). Note: A 12 volt source is required.

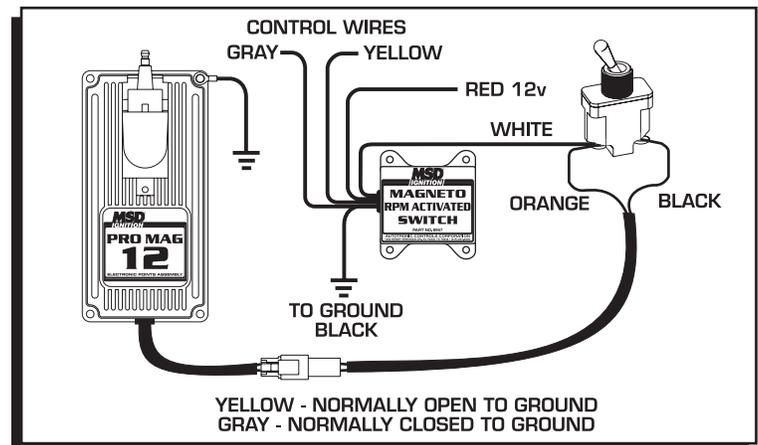


Figure 7 Wiring an RPM Activated Switch.

DISASSEMBLING THE DEUTSCH CONNECTORS

Male Housing: Locate the small recesses in the housing and use a small flat screwdriver to pry off the locking wedge (Figure 8).

Female Housing: Using needlenose pliers or a wire hook, remove the locking wedge by pulling it straight out.



Figure 8 Disassembling the Male Housing.

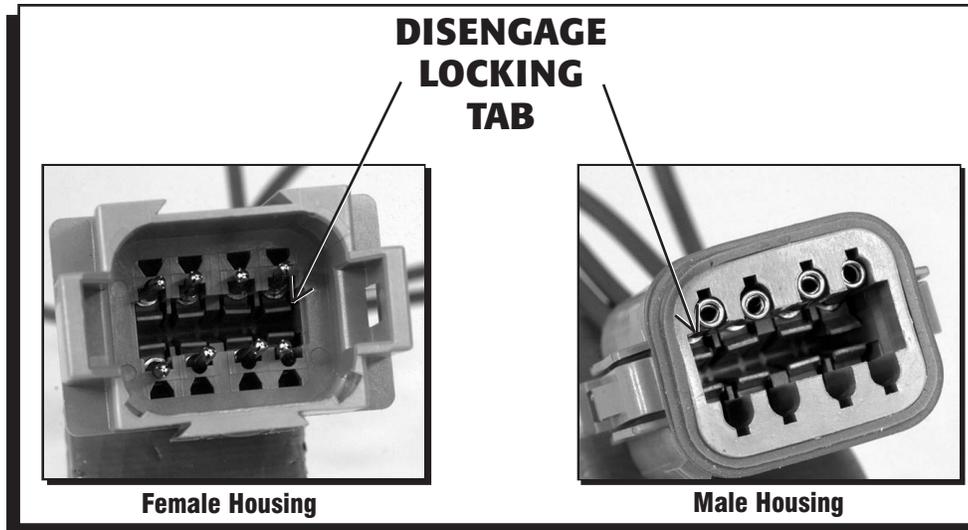


Figure 9 Disassembling the Housings.

To remove the terminals and wires, use a small screwdriver or awl to disengage the locking tabs and pull the wire out (Figure 9).

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, **Proof of Purchase** must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

All returns must have a Return Material Authorization (RMA) number issued to them before being returned. To obtain an RMA number please contact MSD Customer Service at 1 (888) MSD-7859 or visit our website at www.msdpower.com/rma to automatically obtain a number and shipping information.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 5:00 p.m. Monday - Friday (mountain time).

Limited Warranty

MSD warrants this product to be free from defects in material and workmanship under its intended normal use*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD or its suppliers be liable for special or consequential damages.

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD. Any modifications to this item or if it is used on an application other than what MSD markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD will accept no liability for custom applications.