



**HOLLEY EFI VACUUM MANIFOLD
P/N 534-52**



CONTAINS:


- (1) Holley EFI Vacuum Manifold
- (8) 1/8 NPT Plugs w/sealant
- (2) Earl's -6 Low Profile Port Plug
- (1) Instruction Sheet

WARNING: Vacuum manifold to be mount on a robust surface away from sources of high heat and/or vibration. Apply a light coat of thread sealant to NPT thread before installation or leakage will occur.

INSTALLATION INSTRUCTIONS:

1. Choose the proper location to mount the vacuum manifold. Using the supplied template, drill 4 .266" diameter holes (H Drill).
2. Secure the manifold using 4 1/4" Socket Head Cap Screws.
3. Install sensors, adapters, etc. and route all plumbing and wiring.
4. Ensure that the unused threaded holes are plugged with the supplied 1/8 NPT plugs and/or -6 OBR port plug.

**MOUNTING TEMPLATE
.266" DIAMETER DRILL
(H DRILL)**

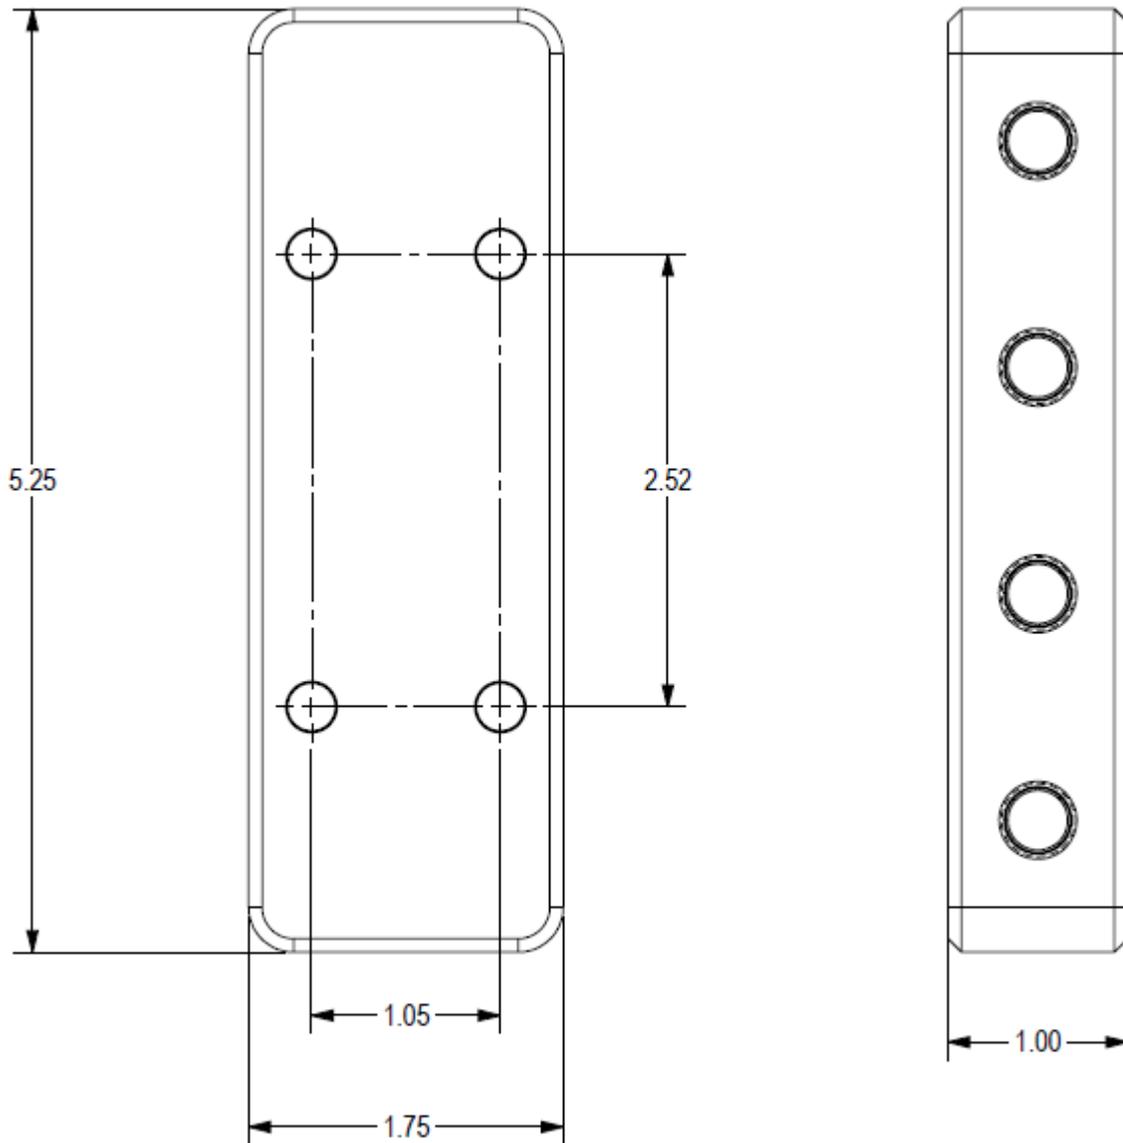

199R11917
Date: 6-4-19