

MSD INSTALLATION INSTRUCTIONS

Flying Magnet Crank Trigger Kit With Hall Effect Pickup Sensor and Adjustable Timing Pointer GM Gen III/IV LS Engine PN 8623-MSD

ONLINE PRODUCT REGISTRATION: Register your MSD product online. Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to www.msperformance.com/registration.

Parts Included:

1 - 8.00" Trigger Wheel	3 - 3/8" Washers
1 - Pickup Holder Assembly	1 - TDC Pointer Assembly
1 - Hall Effect Pickup Assembly (3/4" - 16 Thread Size)	2 - Bolts, 5/16" - 18 x 7/8"
1 - Pickup Base	2 - Bolt, M8x1.25x130mm
2 - Bolts, 5/16" - 18 x 1 1/4"	2 - Spacers
2 - 5/16" Washers	2 - Rectangular Nuts
3 - Bolts, 3/8"- 16 x 1 1/2"	2 - Shims
	1 - Connector Kit

NOTE: On some vehicles the MSD Crank Trigger Kit may require slight modifications to accommodate special engine plates, pulley systems, etc.

NOTE: This kit is designed to be used with the ATI Harmonic Balancer 917302, 918852 and will also work with 917264 and 917242. This kit is also compatible with Meziere water pump WP333.

INSTALLING THE PICKUP AND BRACKET

1. Mount the pickup holder and pointer assembly onto the bracket using the two 5/16x1 1/4" bolts and two 5/16 x 7/8" bolts. (Figure 1). This kit was designed to be mounted on the driver side of the damper.
2. Install the bracket onto the engine. Be sure to use the correct length bolts and shims in the proper location.
3. Install the pickup and locknut into the holder. Do not tighten the locknut at this time.
4. Using method of your choice, verify No. 1 cylinder is at TDC, and then align TDC Pointer with "0" mark on balancer.

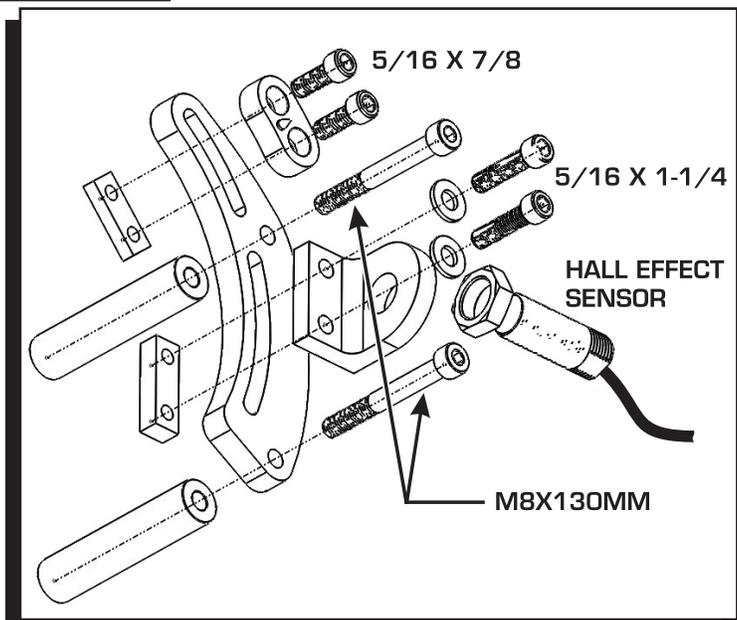


Figure 1. Pickup Bracket Assembly.

